

CD32

P R I M A R E

 
AUDIOPHILE
COMPACT DISC PLAYER

USER GUIDE



WELCOME!

Welcome to the Primare CD32! Your CD32 is a high-quality compact disc player with analogue and digital outputs.

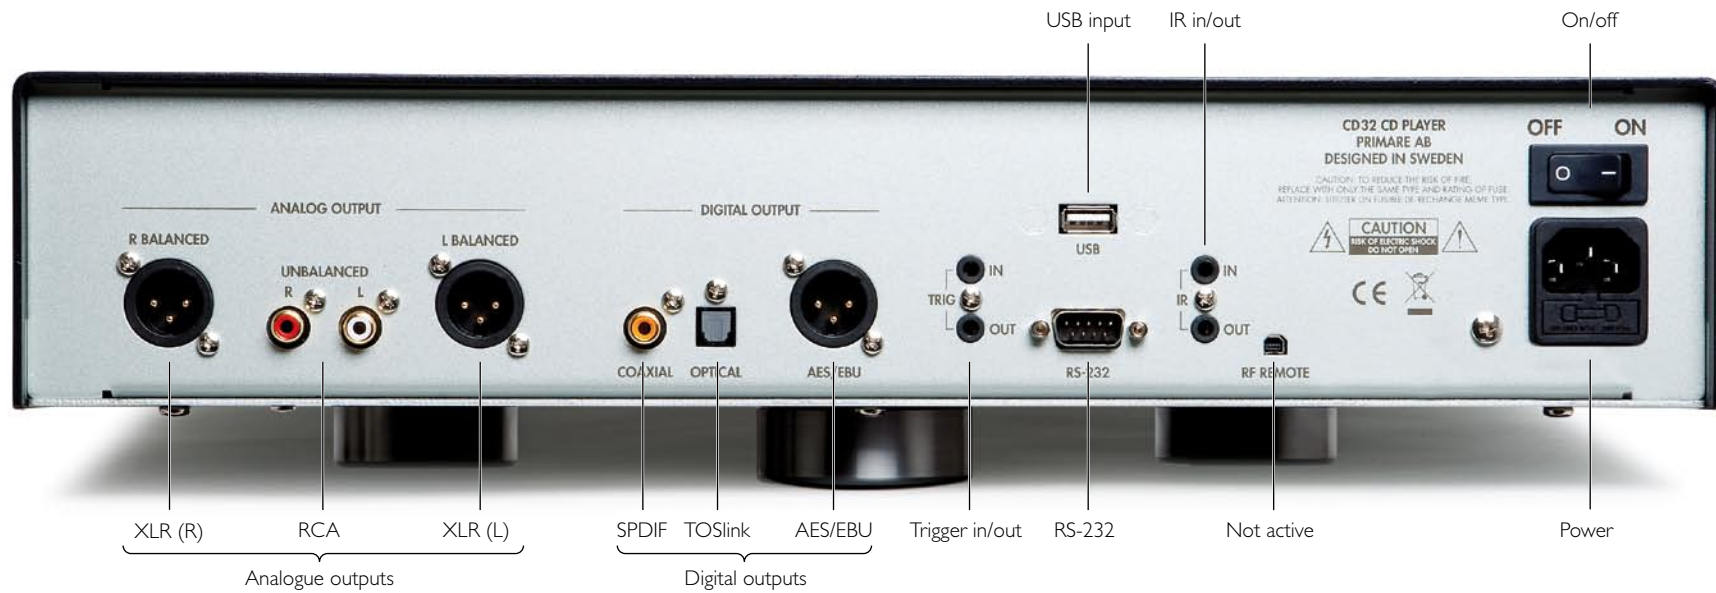

GETTING STARTED

Set up your CD32 in four simple steps:

1 UNPACK THE CD32

Your CD32 is supplied with the following components:

- Mains cable.
- C23 remote control.
- Two batteries for the remote control.

If any of these items are missing please contact your supplier. We recommend you retain the packaging in case you need to transport the unit at a later date.

2 CONNECT TO AN AMPLIFIER

Analogue outputs

The analogue output provides for both the recommended balanced XLR outputs and the conventional unbalanced RCA for connection with an appropriate stereo amplifier or preamplifier:

- Connect the appropriate outputs to your amplifier or preamplifier using a suitable cable.

Digital outputs

Alternatively the CD32 Compact Disc Player provides one SPDIF, one TOSlink, and one AES/EBU digital output for connection to a digital preamplifier or digital surround processor:

- Connect the appropriate output to your preamplifier or surround processor using a suitable cable.

3 CONNECT POWER

- Plug one end of the mains cable supplied with the CD32 into the power connector on the back panel, and connect the other end to a wall socket.

If this cable is not suitable for your power outlets please contact your supplier for an alternative cable.

Note: See *Phase*, page 8, for information about getting the best sound from your CD32.




WARNING: Always disconnect the CD32 from the mains power before connecting or disconnecting any cables.

- Switch on the CD32, using the switch on the back panel.

The standby indicator will light up on the front panel.

To switch on from standby




- Press the  button on the front panel or remote control.

The display shows:

PRIMARE

Press the  button again to switch to standby.

4 PLAY A CD

- Press the  button on the front panel or remote control to open the tray.
- Place the CD in the tray with the label facing upwards.
- Press the  button on the front panel, or the  button on the remote control, to close the tray and start playing the disc.

For more information about playing a CD see the next page.

For more information about playing music files from a USB disk see *Playing music files from a USB disk*, page 7.

USING THE CD32

This page explains how to operate your CD32, using the functions available from either the front panel or the C32 remote control.

FRONT PANEL CONTROLS

Standby

Switches the CD32 to standby, or switches it on from standby.

Stop/Open

When the disc is playing: pauses the disc.

When the disc is paused: stops the disc.

When the disc is stopped: opens or closes the CD tray.

Press and hold: opens the CD tray.

Play/Skip




When the disc is stopped: plays the disc.

When the disc is playing: skips to the next track.

Press and hold: skips back through the tracks.

PLAYING A DISC

To insert a disc

- Press the  button on the front panel, or on the remote control, to open the tray.
- Place the CD in the tray with the label facing upwards.
- Press the  button again to close the tray (or press the  button).

 

The display shows:

READING

followed by the number of tracks and total time:

19
74:59


To play the disc

- Press the  button on the front panel, or the  button on the remote control.

While a disc is playing the display shows the current track number and the elapsed time of the current track; for example:



7
1:24

To pause the disc


- Press the  button on the front panel or the remote control while the disc is playing.

The display shows the pause symbol:

||

You can then resume play by pressing the  button on the front panel or the  button on the remote control.



To stop play

- Press the  button on the front panel or the remote control.

 

LOCATING A POSITION ON THE DISC

You can skip between tracks to locate a particular track on the disc, or you can scan forwards or backwards to locate a position within a track.

To skip forwards through the tracks

- Press the  button on the front panel, or press the  button on the remote control.

To skip back through the tracks



- Press and hold the  button on the front panel, or press the  button on the remote control.

The front panel display shows the track number:



12

- Release the button to start playing the selected track from the beginning.

To scan through the disc

 
- Press the  or  button on the remote control once to scan at 4X speed, or twice to scan at 8X speed.

The display shows the position within the track.

- Press the  button on the front panel, or the  button on the remote control to start playing from the position you have located.

USING THE REMOTE CONTROL


This page explains how to use the C23 remote control to operate the CD32, and how to fit the batteries into the remote control.

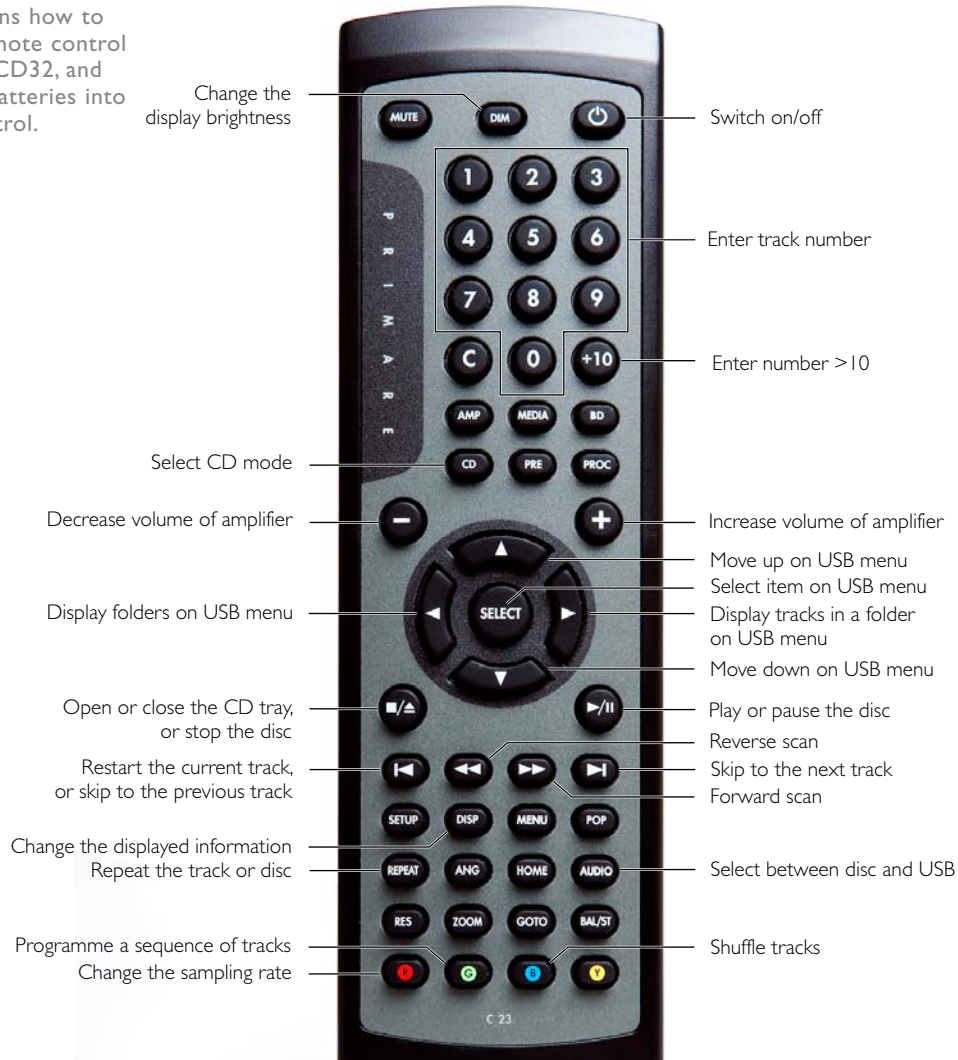


FITTING THE BATTERIES

Before using the remote control you need to insert the two AAA batteries supplied with the C23.

 
- Gently slide open the cover on the back of the remote control:

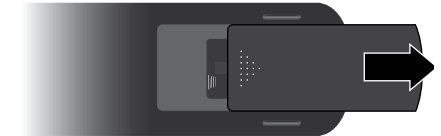

 - Insert the two batteries, observing the polarity printed on the bottom of battery compartment:

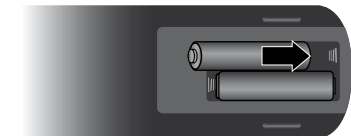

 - Slide back the cover until it clips into place:

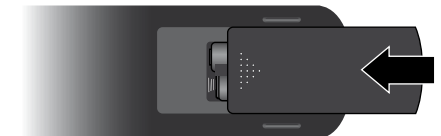

Note: Replace only with alkaline batteries type AAA, LR03, or equivalent.

When disposing of old batteries please be considerate to the environment.

ADVANCED FEATURES

This chapter explains how to use the more advanced features of the CD32, and how to play audio files from a USB disk. These functions are accessed from the remote control.

CHANGING THE FRONT PANEL DISPLAY

You can choose how the time is shown on the front panel display, and change the brightness.

To change the time display

- Press the **DISP** button..

The display switches between the following four options:

Elapsed time for the current track

3:45

Remaining time for the current track

1:15 RT

Elapsed time for the entire disc

ALL 18:45

Remaining time for the entire disc

ALL 41:15 RT

To change the front panel display brightness

- Press the **DIM** button to step through the three levels of illumination and blank.

The display auto-dims after a few seconds and returns to the selected brightness when you operate any control.

REPEAT PLAYBACK

You can play the current track repeatedly, or repeat the entire disc.

To repeat the current track

While the disc is playing:

- Press the **REPEAT** button.

The front panel shows the symbol and **TRK.**

To repeat the entire disc

- Press the **REPEAT** button twice.

The front panel shows the symbol and **ALL.**

To turn off repeat

- Press the **REPEAT** button again.

The symbol in the display will be cleared.

SHUFFLE PLAYBACK

Shuffle playback plays the tracks on the disk in random order.

To play the tracks in random order

While the disc is playing:

- Press the blue **B** button.

The front panel shows the symbol:

In shuffle mode you can pause a track by pressing the button or skip a track by pressing the button.

To turn off shuffle

- Press the blue **B** button again.

The symbol in the display will be cleared.

PLAYING A SPECIFIC TRACK

You can play from any track by entering the track number on the remote control.

To play from a specific track

- Specify the track number by pressing one of the buttons **1-9**.

To enter a two-digit track number press the **+10** button first. For example, to enter 16 press the **+10** button followed by the **1** and **6** buttons.

UPSAMPLING

The CD32 allows you to upsample the 44.1kHz signal from a CD to either 48kHz or 96kHz, which improves fine detail, sound stage depth and image separation.

- Press the red **R** button to select between **44.1K**, **48K**, and **96K** (recommended).

PROGRAMMING TRACKS

The CD32 Compact Disc Player allows you to programme a sequence of tracks on the current disc. You can then play just the tracks you have programmed.

To programme a sequence of tracks

While the disc is stopped:

- Press the green **G** button.

The front panel display shows:



02 04 06 08
P

- Use the **1-9** and **+10** buttons to enter the numbers of the tracks you want to play.

As you enter each track number the front panel display shows the current track, preceded by the tracks you have already programmed in small text:




02 04 06 08
P

To play the selection you have programmed

- Press the **▶/||** button.

 As the tracks play the display shows the sequence of track numbers you have programmed, with the currently playing track highlighted:



02 40 06 08 10 12 14
P

To step through the programmed tracks

While the tracks are playing:

- Press the **◀** or **▶** button.

To clear the programme

- Press the **■/▲** button.

PLAYING MUSIC FILES FROM A USB DISK

You can play MP3/WMA files on a USB disk or memory stick by connecting it to the USB port.

To select the USB disk

- Press the **AUDIO** button.

The display shows:



USB

It will then show an alphabetical list of the folders containing MP3 files on the USB disk.

Names that are too long to fit on the display will scroll across.

To select a folder

- Press the **▲** or **▼** button to step between the folders.

The display shows the current folder highlighted. For example:



 
[Animal]
[Echo]
[Flesh Tone]
[Rated R]
[She Wolf]

- Press the **▶** or **SELECT** button to display the tracks in the highlighted folder.
- Press the **◀** button to return to the list of folders.

To select a track

- Press the **▲** or **▼** button to step between tracks.

The display shows the current track highlighted:



04 Home.mp3
05 Acapella.mp3
06 Scream.mp3
07 Emancipate.mp3
08 Brove.mp3

- Press the **▶/||▶**, or **SELECT** button to play from the highlighted track.

As each track plays the display shows the artist and track name (or filename if this information is not available), elapsed time, and track duration (or VBR for Variable Bit Rate tracks).

To step through the tracks

While the tracks are playing:

- Press the **◀** or **▶** button to step between the tracks in the current folder.

To scan through a track

- Press the **◀◀** or **▶▶** button.
- Press the **▶/||** button to start playing from the position you have located.

Repeat and shuffle

- Press the **REPEAT** button to repeat the Track (**T**), Folder (**F**), or All (**A**).
- Press the blue **B** button to shuffle the tracks within a folder.

TECHNICAL SPECIFICATION

Every component of the CD32, from the CD transport to the audio output stage, has been designed to achieve the highest possible audio performance.

UNBALANCED OUTPUT

Voltage: 2.1 VRMS

Impedance: 390Ω

BALANCED OUTPUT

Voltage: 4.1 VRMS

Impedance: 47Ω

DIGITAL OUTPUTS

Coaxial: SPDIF

Optical: Toslink

AES/EBU: XLR

PCM Sample Rate: 44.1kHz

Upsampling: 44.1kHz, 48kHz, or 96kHz.

USB PORT

File format: MP3 or WMA

Disk format: FAT16 or FAT32

GENERAL

Mechanism: Asatech 8210.B01-02, Sanyo SF-P101N

D/A Converter: 2x PCM1704, DF1706 (digital filter), 24/96kHz

Frequency Response: 20Hz – 20kHz (-0.5dB)

Signal to Noise Ratio: 20Hz – 20kHz unweighted -100 dB

THD + N: 20Hz – 20kHz <0.01%

Power Consumption: Operating 25W, Idle 22W, Standby 0.5W

Dimensions: 430 x 385 x 110 mm

Weight: 9 kg

Color Options: Black, Titanium

ADDITIONAL INFORMATION

These instructions help you get the best possible sound from your CD32, and give information about configuring its advanced settings.

PHASE

The phase of the AC supply can make a significant difference to the sound.

Ensure that the live pin of the AC power cable is connected to the left-hand pin of the power connector, viewed from the back panel.

BURN-IN

Your Primare will start to sound best after an initial burn-in of approximately 24 hours.

You will notice a further smaller improvement in sound quality for at least another 3 days' playing.



RS232 AND TRIGGERS


The RS232 input allows you to connect the CD32 to a controller system. For more information please contact Primare or visit www.primare.net.


The Trigger input allows the CD32 to be switched on by another device, such as an I32.

The Trigger output allows the CD32 to switch on other devices.

SETTING THE TRIGGER INPUT AND IR INPUT



- Press the  button to switch on the CD32.
- Press and keep holding down the  button.

NOTE: You need to keep the  button held down throughout this procedure.

- When the version number is displayed press the  button.



The display shows:

TRIG

- Press the  button to select between **TRIG ON**, to enable the trigger input, or **TRIG OFF**, to disable it.
- Press the  button again.

The display shows:

IR

- Press the  button to select between **IR FRONT**, to control the CD32 using a remote control pointed at the front panel, or **IR BACK**, to control it via the IR-input on the back panel.
- Release the  button to return to normal operation.

COPYRIGHT AND ACKNOWLEDGMENTS

Copyright © 2010 Primare AB.
All rights reserved.

Primare AB
Renvägen 1
SE-352 45 Växjö
Sweden

<http://www.primare.net>

Issue: CD32/1

The information in this guide is believed to be correct as of the date of publication. However, our policy is one of continuous development and so the information is subject to change without notice, and does not represent a commitment on the part of Primare AB.

Primare is a trademark of Primare AB.

This guide was produced by
Human-Computer Interface Ltd.
<http://www.interface.co.uk>

Safety compliance

This product has been designed to meet the IEC 60065 international electrical safety standard.

CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN ATTENTION RISQUE DE CHOC ELECTRIQUE NE PAS OUVRIR

CAUTION: To reduce the risk of electrical shock do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.

WARNING: To reduce the risk of fire or electrical shock, do not expose this apparatus to rain or moisture.

CAUTION: In Canada and the USA, to prevent electric shock, match the wide blade of the plug to the wide slot in the socket and insert the plug fully into the socket.

This product is designed and manufactured to meet strict quality and safety standards. However, you should be aware of the following installation and operation precautions.

1. Take heed of warnings & instructions

You should read all the safety and operating instructions before operating this appliance. Retain this handbook for future reference and adhere to all warnings in the handbook or on the appliance.

2. Water and moisture

The presence of electricity near water can be dangerous. Do not use the appliance near water – for example next to a bathtub, washbowl, kitchen sink, in a wet basement or near a swimming pool, etc.

3. Object or liquid entry

Take care that objects do not fall and liquids are not spilled into the enclosure through any openings. Liquid-filled objects such as vases should not be placed on the equipment.

4. Ventilation

Do not place the equipment on a bed, sofa, rug or similar soft surface, or in an enclosed bookcase or cabinet, since ventilation may be impeded. We recommend a minimum distance of 50mm around the sides and top of the appliance to provide adequate ventilation.



The lightning flash with an arrowhead symbol within an equilateral triangle, is intended to alert the user to the presence of uninsulated 'dangerous voltage' within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

5. Heat

Locate the appliance away from naked flames or heat producing equipment such as radiators, stoves or other appliances (including other amplifiers) that produce heat.

6. Climate

The appliance has been designed for use in moderate climates.

7. Racks and stands

Only use a rack or stand that is recommended for use with audio equipment. If the equipment is on a portable rack it should be moved with great care, to avoid overturning the combination.

8. Cleaning

Unplug the unit from the mains supply before cleaning.

The case should normally only require a wipe with a soft, damp, lint-free cloth. Do not use paint thinners or other chemical solvents for cleaning.

We do not advise the use of furniture cleaning sprays or polishes as they can cause indelible white marks if the unit is subsequently wiped with a damp cloth.

9. Power sources

This appliance must be connected to a mains socket outlet using the supplied power cord. To disconnect this apparatus from power, you must disconnect the power cord. Make sure the power cord is always easily accessible.

Only connect the appliance to a power supply of the type described in the operating instructions or as marked on the appliance.

This is a Class I device and **must** be earthed.

The power switch is a single-pole switch. When the switch is in the "Off" position, the appliance is not completely disconnected from the main power.

10. Power-cord protection

Power supply cords should be routed so that they are

not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords and plugs, and the point where they exit from the appliance.

11. Grounding

Ensure that the grounding means of the appliance is not defeated.

12. Power lines

Locate any outdoor antenna/aerial away from power lines.

13. Non-use periods

If the unit has a stand-by function, a small amount of current will continue to flow into the equipment in this mode. Unplug the power cord of the appliance from the outlet if left unused for a long period of time.

14. Abnormal smell

If an abnormal smell or smoke is detected from the appliance, turn the power off immediately and unplug the unit from the wall outlet. Contact your dealer immediately.

15. Servicing

You should not attempt to service the appliance beyond that described in this handbook. All other servicing should be referred to qualified service personnel.

16. Damage requiring service

The appliance should be serviced by qualified service personnel when:

- A. the power-supply cord or the plug has been damaged, or
- B. objects have fallen, or liquid has spilled into the appliance, or
- C. the appliance has been exposed to rain, or
- D. the appliance does not appear to operate normally or exhibits a marked change in performance, or
- E. the appliance has been dropped or the enclosure damaged.

P R I M A R E

THE SOUND AND VISION OF SCANDINAVIA



PLEASE VISIT PRIMARE.NET FOR MORE
INFORMATION ABOUT OUR PRODUCTS